

## Directions for Operating THE COLEMAN CAMP STOVE

**To Open Up Stove** swing the folding legs under. Open the lid and lay it back on its legs, which are attached to lid-ends. Raise the grate and swing the tank into position outside the stove.

**To Fill the Tank.** Use the key attached to the chain and see that the generator valve at the right end of the stove is closed. Stand the stove on end with the filler plug up. Allow the lid to swing out at right angles so as to act as a brace. Remove filler plug at the upper end of the tank, fill with one quart of gasoline. Replace filler plug and tighten by hand. Loosen small air stem at the left end of tank one full turn by turning to the left. Pump from 6 to 10 strokes of air into the tank and close air stem tightly with the fingers.


**To Generate.** Raise grates, open generator valve with the key, and allow gasoline to fill the generating pan. Close valve and light the gasoline. When gasoline has nearly burned out, open the valve several turns and if the blaze is steady, the generator is hot enough to light the burner. Now quickly swing burner into place under generator tube by pulling out on shifting rod at the right front corner of the stove. (Be sure that the small fiber handle under the right burner is pointing downward when shifting. Otherwise you will not be able to shift burners.) If fire is still burning in generating pan, it will ignite the gas coming through the burner. Otherwise it will be necessary to light with a match.

In case the stove does not seem to be thoroughly generated after shifting burner into position, shift it back, relight and let the "hot blast" flame complete generation. It is not necessary to close the valve when shifting from one position to the other if shifted quickly.

After the right hand burner is generated, the left hand burner may be lighted with a match by turning the fiber handle which is now in a position under the generator valve.

**To Set Up Oven.** The oven grates are packed behind the burners and need not be removed except to set up the oven. To set up the oven, raise the lid to an upright position and swing the oven-ends to the front close to the stove ends. Lift oven parts out of the lid. Place the small oblong baffle plate over the burner grate so as to distribute the flame evenly. Unfold the grate and hook bent ends through the holes in the middle of lid which now forms the oven-back. Hook the lower projections of oven-ends into the bottom holes of oven-front. Then swing the oven-front toward the oven and insert the grate bars between oven-end projections. Swing oven-top over, snap both the lid and the lid fastener over the oven-edge to hold in place. The oven is now ready for use. It can also be swung back and used as a warming oven.

## Price List of Parts for THE COLEMAN CAMP STOVE

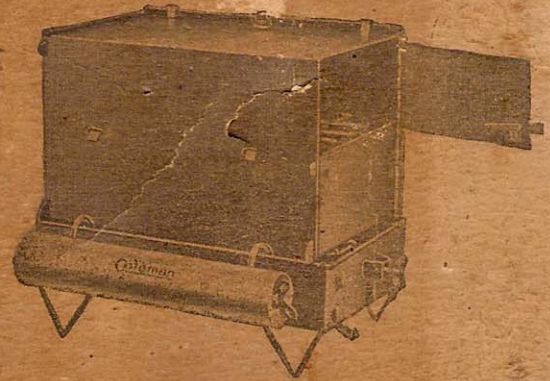

No.	Description	List Price
CS 89	Key and Ring .....	10 40
CS 34	Stove grates, each .....	20 50
CS 9P	Pump leather .....	10 10
CS 31	Tank Filler Plug .....	50 100
CS 71	Feed Wire with connections .....	50 120
CS 62	Generator Valve and Gas Tip Complete .....	1.60 3.00
CS 96	Oven Grate .....	1.50 2.00
CS 32	Air Stem .....	10

### The Coleman Lamp Co.

FACTORY AND GENERAL OFFICES:  
WICHITA, KANSAS.

at Philadelphia, Chicago and Los Angeles  
Canadian Factory: Toronto.